









	<b>Car Charger Socket:</b> For standard car chargers (Typically work at the 7.2V setting on the battery, or connect direct to solar panels at 10V)
	<b>USB Adaptor:</b> Plug in a standard USB charger (use 5V setting). <b>iPod:</b> iPhone, Nano, Mini, Shuffle, Video, Color, Click Wheel and Dock Connector (via USB charger)
	<p><b>Universal Adaptor Plugs:</b></p> <p><b>S (2.3x0.7mm):</b> <b>AudioVox:</b> CDM8400, 8410, 8450, 8610, 8900, 8910, 8915, 8920, 8930, 8940, 9900, 9950</p> <p><b>Canon:</b> A100, A200, A300, A310, A400, A410, A430, A510, A520, A530</p> <p><b>Danger:</b> Sidekick II</p> <p><b>Kodak:</b> C330, C340, C360, C503, C533, C603, C643, C663, CD33, CD43, CW330, CX4200, CX4210, CX4230, CX4300, CX4310, CX6200, CX6230, CX6330, CX6445, CX7220, CX7330, CX7430, CX7525, CX7530, DX4330, DX4530, DX6340, DX6440, Z612, Z650, Z700, Z740</p> <p><b>Palm:</b> Tungsten E, Zire, Zire 21, Zire 31, Zire 72</p> <p><b>Samsung:</b> SPHA460, SPHA500, A600, SPHA600, A620, SPHA620, A660, SPHA660, A666, A680, SPHA680, A700, SPHA700, SPHA740, SPHA760, A800, SPHA800, A820, SPHA820, A840, SPHA840, A880, SPH880, A920, SPHA920, A940, SPHA940, N240, SPHN240, SPHN400, VGA1000, VMA680</p> <p><b>Sanyo:</b> 5500, RL2000, RL2500, RL4920, SCP7300, SCP8100, SCP8200, VGA1000, VM4500</p> <p><b>H (3.5x1.3mm):</b> <b>Navman:</b> ICN 610, 630, 635, 650</p> <p><b>I (4.0x1.7mm):</b> <b>Sony:</b> PSP</p> <p><b>Kodak:</b> DC4800, DX6490, DX7440, DX7590, LS443, LS633, LS743, LS753, P850, P880, V530, V550, V570, V603, Z730, Z7590, Z760</p> <p><b>E (5.5x2.1mm):</b> <b>Altec Lansing:</b> inMotion speakers</p> <p><b>Voltaic:</b> AA/AAA Battery Charger (see below)</p>
	<p><b>Mini USB Adaptor:</b></p> <p><b>BlackBerry:</b> 6200, 6210, 6220, 6230, 6280, 6500, 6510, 6700, 6710, 6720, 6750, 7100, 7100g, 7100i, 7100r, 7100t, 7100v, 7100x, 7105t, 7130c, 7130e, 7200, 7210, 7230, 7250, 7290, 7500, 7510, 7520, 7700, 7730, 7750, 7780, 8100, 8300, 8310, 8700, 8700c, 8700g, 8700r, 8703e, 8800, 8820, 8830</p> <p><b>Creative:</b> MuVo Slim, Xmod, Zen Micro, Zen Micro Photo, Zen Neon 512MB, Zen Neon 5GB, Zen Neon 2, Zen Sleek, Zen Sleek Photo, Zen Stone, Zen V, Zen V Plus</p> <p><b>Garmin:</b> Astro, Astro 220, Edge 205, Edge 305, Edge 605, Edge 705, eTrex Legend C, eTrex Legend Cx, eTrex Legend HCx, eTrex Summit HC, eTrexVenture Cx, eTrex Venture HC, eTrex Vista C, eTrex CX, eTrex Vista CX, eTrex Vista HCx, Forerunner, 205, Forerunner 301, GPS 10x Receiver, Mobile 10 for laptops, Mobile for Blackberry with GPS 10x, Nuvi 200, Nuvi 200w, Nuvi 250, Nuvi 250w, Nuvi 260, Nuvi 270, Nuvi 300, Nuvi 310, Nuvi 350, Nuvi 360, Nuvi 370, Nuvi 650, Nuvi 660, Nuvi 670, Nuvi 680, Nuvi 750, nuvi 760, Nuvi 770, Rino 530, StreetPilot i2, StreetPilot3, SteetPilot i5</p> <p><b>Motorola:</b> RAZR V3, A70, A780, A910, A1200, E770, E770V, E1070, K3, KRZR K1, KRZR K1m, KRZR K3, L2, L6, L7, PEBL, PEBL U6, RAZR V3, RAZR V3xx, RAZR V3xx iMode, RAZR Maxx V6, RAZR2 V8, RIZR Z3, RIZR Z6, RIZR Z8, SLVR, SLVR L7, V3i, V3x, V360, W375, W510</p> <p><b>Orange:</b> O2 Atom, O2 XDA Exec, O2 XDA Life, O2 XDA II Mini</p> <p><b>Palm:</b> Z22...</p>
	<b>Nokia 1100:</b> 1100, 1221, 1260, 1261, 2115i, 2116i, 2125i, 2126i, 2128i, 2260, 2270, 2285, 22300, 600, 3100, 3120, 3200, 3205, 3220, 3285, 3300, 3360, 3361, 3390, 3395, 3520, 3560, 3570, 3585, 3585i, 3586i, 3587i, 3588i, 3589i, 3590, 3595, 3600, 3620, 3650, 3660, 5100, 5140, 6010, 6015i, 6016i, 6019i, 6020, 6030, 6061, 6062, 6100, 6160, 6200, 6225, 6230, 6235i, 6236i, 6250 6i, 6255i, 6256i, 6310i, 6265i, 6340, 6340i, 6360, 6370, 6385, 6560, 6585, 6590, 6590i, 6600, 6610, 6620, 6630, 6630b, 6651, 6670, 6682, 6800, 6820, 6822, 7210, 7250i, 7270, 7280, 7380, 7610, 7710, 8260, 8265, 8265i, 8270, 8290, 8390, 8801, 9290, 9300, 9500, E60, E70, etc.
	<b>Nokia N73:</b> 1600, 3110 Classic, 3250, 5070, 5200, 5300 XpressMusic, 5500 Sport, 5700 XpressMusic, 6070, 6080, 6085, 6086, 6101, 6103, 6111, 6125, 6131, 6136, 6151, 6233, 6270, 6280, 6288, 6290, 6300, 7360, 7370, E61, E61i, N70, N70 Music Edition, N71, N72, N73, N73 Music Edition, N76, N80, N91, N91 8GB, N93, N93i, N95, N800 Internet Tablet
	<b>Samsung T509:</b> A437, A707, A717, A727, Blackjack, SCHRS510, SCHU420, SCHU740, SGHA707, SGHD800, SGHD807, SGHD820, SGHD900, SGHi607 Blackjack, SGHP300, SGHT509, SGHT509s, SGHT519, SGHT629, SGHT809, SGHZ510, SGHZ540, SPHA303, SPHA503 Drift, SPHM610, T509
	<b>Sony Ericsson J100:</b> D750i, J100a, J100c, J100i, J220a, J220c, J220i, J230c, J230i, K310a, K310c, K310i, K320i, K510a, K510c, K510i, K610i, K610im, K618i, K750c, K750i, K758c, K790a, K790c, K790i, K800i, M600i, M608c, P990i, V630i, W300c, W300i, W550c, W550i, W600, W600c, W600i, W700c, W700i, W710i, W710c, W800, W800c, W810c, W810i, W830i, W830c, W850i, W900c, W900i, W950i, W958c, Z520a, Z520c, Z520i, Z525a, Z525i, Z530c, Z530i, Z550a, Z550c, Z550i, Z558c, Z558i, Z610i, Z710c, Z710i
	<b>Sony Ericsson T28:</b> A2218z, A2618s, A2618sc, A2628s, A2628sc, A2638sc, A3618s, A3618sc, F500i, J300, J300a, J300c, J300i, K300a, K300c, K300i, K500, K500c, K500i, K506c, K508c, K508i, K600i, K608i, K700, K700c, K700i, P800, P802, P900, P908, P910, P910a, P910c, P910i, R300d, R300LX, R300e, R310s, R310sc, R320s, R320sc, R380 World, R380e, R380s, R380sc, R520LX, R520m, R520mc, S700, S700c, S700i, S710a, T20e, T20ec, T20s, T28, T28s, T28sc, T28z, T29s, T29sc, T39m, T39mc, T60c, T60d, T60ds, T60LX, T61c, T61d, T61LX, T61u, T61z, T62u, T62u, T65, T68, T68i, T68ie, T68m, T200, T202, T226, T226m, T230, T237, T237s, T238, T290, T300, T306, T310, T312, T316, T608, T610, T616, T618, T628, T630, T637, Z200, Z290a, T290c, T290i, T292a, Vodafone 802SE, Z1010, Z208, Z300, Z300a, Z300c, Z300i, Z500a, Z502a, Z600, Z608, Z800i
	<b>AC Travel Charger:</b> This charger can be used to recharge the battery pack from an AC power source (110/240V 800mA).
	<b>DC Car Charger:</b> This charger can be used to recharge the battery pack from a car.